



By Summit Baby, Inc.  
 P.O. Box 1214  
 Summit, NJ 07902  
 www.summitbaby.com  
 info@summitbaby.com

## ADDITIONAL INSTRUCTIONS

**Inflating the Pillow** This picture replaces 'Getting Started" instructions picture 2



UPDATE: we have shortened the nozzle of the blue air hose so that it is no longer necessary to push it thru the flap at base of the valve.

Simply insert the hose into the valve and begin pumping.

When the blue hose is removed air will not escape, eliminating any need to "finish-off" the inflation by blowing.

**Rapid Deflation**



For RAPID DEFLATION squeeze the valve to open the flap at the base of the valve. Compress the Pillow.

You will hear the air escaping.



By Summit Baby, Inc.  
 P.O. Box 1214  
 Summit, NJ 07902  
 www.summitbaby.com  
 info@summitbaby.com

## ADDITIONAL INSTRUCTIONS

**Inflating the Pillow** This picture replaces 'Getting Started" instructions picture 2



UPDATE: we have shortened the nozzle of the blue air hose so that it is no longer necessary to push it thru the flap at base of the valve.

Simply insert the hose into the valve and begin pumping.

When the blue hose is removed air will not escape, eliminating any need to "finish-off" the inflation by blowing.

**Rapid Deflation**



For RAPID DEFLATION squeeze the valve to open the flap at the base of the valve. Compress the Pillow.

You will hear the air escaping.